


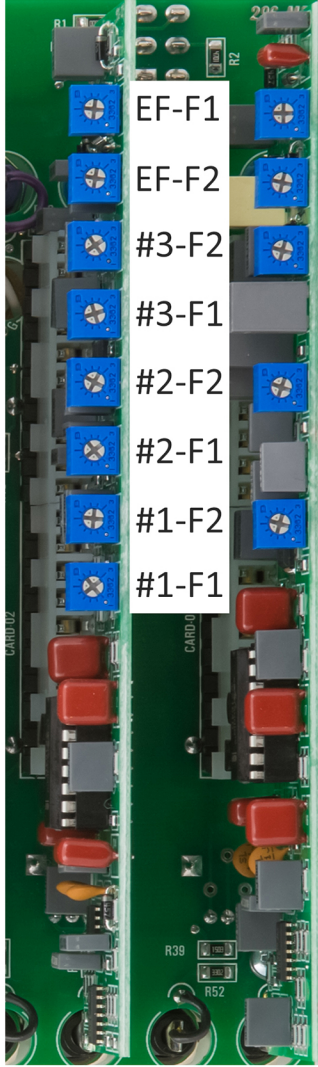

EF-F1

EF-F2

#3-F2

#3-F1

#2-F2

#2-F1

#1-F2

#1-F1

	Card 1		Card 2		Card 3		Card 5	
	F1	F2	F1	F2	F1	F2	F1	F2
Channel	0	1	2	3	4	5	6	7
Frequency	<100 Hz	150 Hz	250 Hz	350 Hz	500 Hz	630 Hz	800 Hz	1000 Hz
EF Trim	TR5	TR4	TR13	TR12	TR21	TR20	TR29	TR28
Freq Trim #1	na	105 Hz TR3	210 Hz TR11	310 Hz TR10	450 Hz TR19	580 Hz TR18	730 Hz TR27	920 Hz TR26
Freq Trim #2	na	185 Hz TR1	285 Hz TR7	415 Hz TR6	545 Hz TR15	690 Hz TR14	870 Hz TR23	1080 Hz TR22
Freq Trim #3	na	138 Hz TR2	245 Hz TR9	355 Hz TR8	490 Hz TR17	630 Hz TR16	790 Hz TR25	1000 Hz TR24

	Card 6		Card 8		Card 9		Card 10	
	F1	F2	F1	F2	F1	F2	F1	F2
Channel	8	9	A	B	C	D	E	F
Frequency	1300 Hz	1600 Hz	2000 Hz	2600 Hz	3500 Hz	5000 Hz	8000 Hz	>10 KHz
EF Trim	TR37	TR36	TR45	TR44	TR53	TR52	TR61	TR60
Freq Trim #1	1160 Hz TR35	1460 Hz TR34	1850 Hz TR43	2360 Hz	3100 Hz TR51	4500 Hz TR50	6700 Hz TR59	10.6 KHz TR58
Freq Trim #2	1360 Hz TR31	1730 Hz TR30	2200 Hz TR39	2880 Hz TR38	4100 Hz TR47	6100 Hz TR46	9700 Hz TR55	17 KHz TR54
Freq Trim #3	1250 Hz TR33	1600 Hz TR32	2000 Hz TR41	2600 Hz TR40	3550 Hz TR49	5200 Hz TR48	8000 Hz TR57	13.2 KHz TR56